

ROMAN SHADE MEASUREMENT INSTRUCTIONS

We always recommend using a metal tape to do your measurements.

1. Select Mount Type:


Inside:

- Mounted within the window frame
- Provides a clean, built-in look
- Great way to leave attractive woodwork exposed
- if window frame isn't deep enough please select outside mount



Outside:

- Great option when there is not enough depth for an inside mount
- Mounted to the wall, ceiling or molding surface surrounding the window
- Often used to make the window appear larger or to hide a less attractive window or door
- No minimum depth requirement

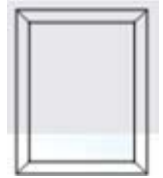

2. Measure:

Inside:

Step 1: Measure the inside width at 3 locations- the top, middle and bottom. Record the smallest of the 3 measurements. This is your ordering width. We will make the necessary deductions (approx. 1/8" -1/2").

Step2: Measure the height at 3 locations – the left side, Record the largest of the 3 measurements. This is your ordering length.



Outside:

Step 1: Measure the width of the area you wish to cover. If space allows we recommend adding 2-3" (1-1 1/2" each side) to this measurement to help eliminate light seepage. This is your ordering width and will be the overall measurement of the shade.

Step 2: Measure the height of the area you wish to cover. This is your ordering length.



3. Control Type:

Standard Cord Lock:

- Allows you to raise and lower shade and lock in place
- As shade is raised. Cord length increases
- Cleat included to wrap cord around for clean look and child safety
- No charge

Continuous Loop:

- Continuous beaded chain allows for easy operation
- The chain always remains the same length regardless of shade position
- Makes operating larger shades easier

4. Select Control position : Left or Right

- This is the side of the shade that your control will hang from (left or right)As shade is raised. Cord length increases
- Consider any obstacles that may interfere with operation (door handle, window opener, furniture location, etc.)